
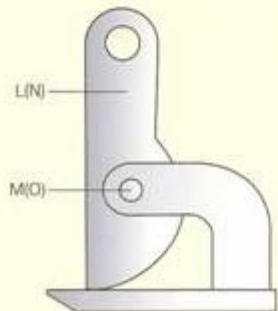


SPARE PARTS

All spare parts are available either separately or as repair sets. It is recommended when any parts are damaged to repair them immediately and not to take any risks.

When ordering spare parts always give: model, lifting capacity, jaw opening and serial number as well as the needed spare parts.

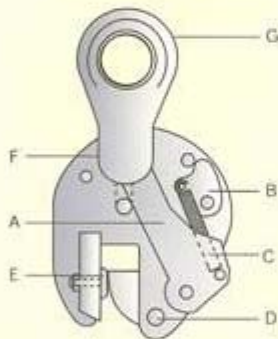

- A. Cam assembly
- B. Lock lever assembly
- C. Lock spring
- D. Cam pin
- E. Pivot complete
- F. Shackle pin
- G. Lifting eye for TS, STS, TE, STE, MP model
- H. Lifting eye for TSVLA, STSVLA model
- I. Linkage arr. TMP, STEMP, TSMP, STSMP model
- J. Link pin for MP model
- L. Cam for FH model
- M. Cam pin for FH model
- N. Cam for FHS model
- O. Cam pin for FHS model