


## ASSEMBLY INSTRUCTIONS

### PARTS

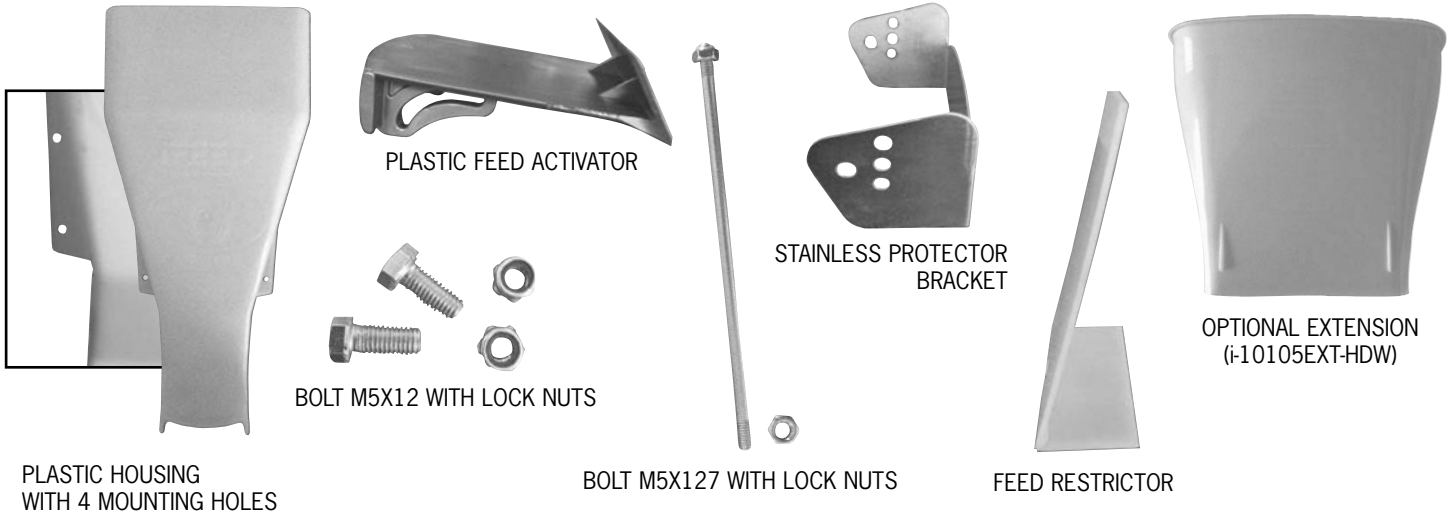

### ASSEMBLY INSTRUCTIONS




FULLY ASSEMBLED FEEDER SHOWN ON PAGE 2

1. Insert plastic feed activator into the top of the plastic housing and lower it down until it begins to protrude through the bottom hole of the housing, as shown in **Figure #1**.


**Note:** It is very important that the feed activator be installed correctly in order for feeder to work properly.

2. Slide the stainless protector bracket onto bottom of the plastic housing as shown in **Figure #2**. Ensure that the holes in the bracket align with the holes in the housing.

3. Attach stainless protector bracket to the plastic housing using two of the bolt M5X12 with lock nuts, and one bolt M5X127 with lock nut. Depending on how much feed you want released, there are three possible configurations/settings for the M5X127 bolt with lock nut - HIGH, MEDIUM AND LOW, as shown in **Figure #3**.

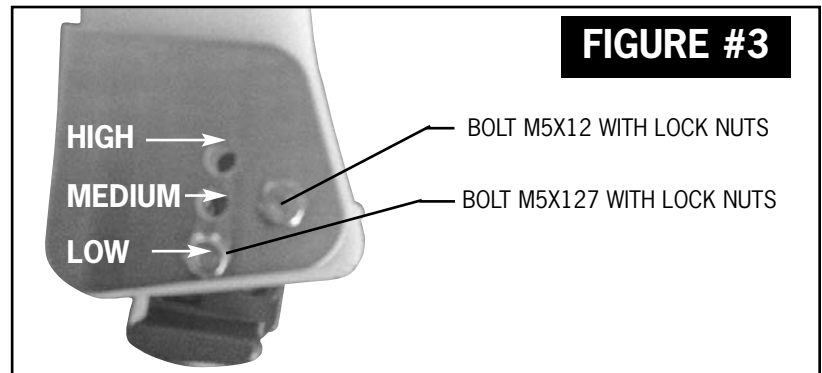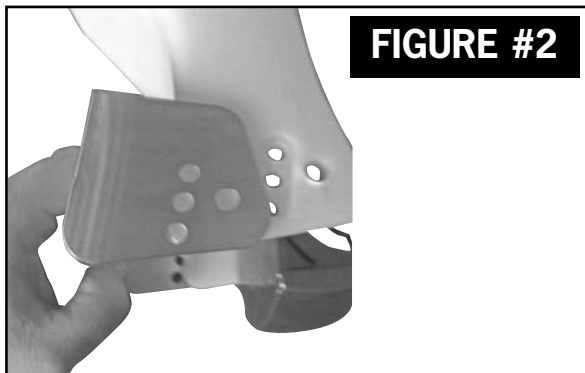
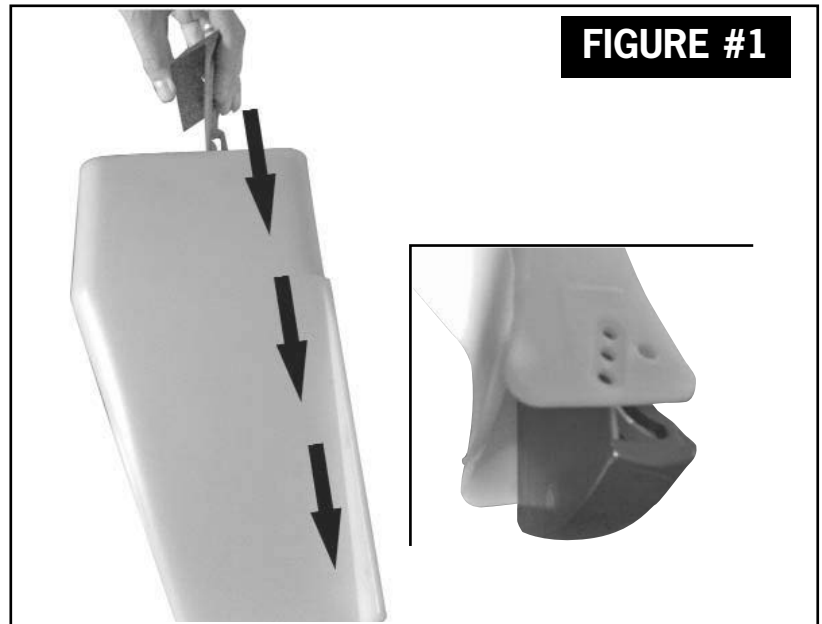


- 4. Note: Step #4 is optional.**  
If you are using pellets or a coarse feed, the feed restrictor may not be necessary. Should you wish to install the feed restrictor, insert it into the plastic housing from the top, as shown in **Figure #4**. Continue to gently lower it down until it rests on the plastic feed activator you installed in Step #1.

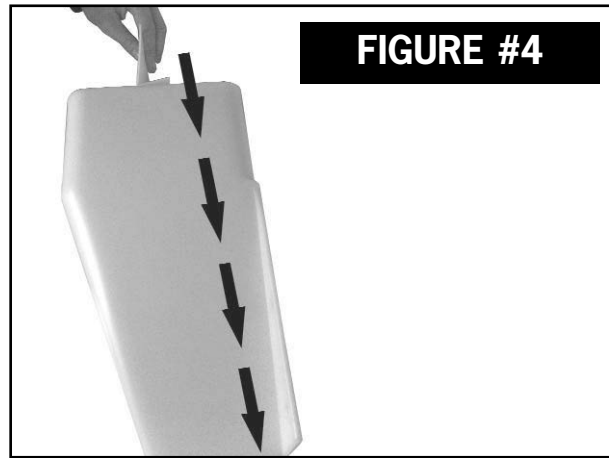

- 5. Note: Step #5 is optional.**  
An extension to the ad lib feeder is also available. (**Part # i-10105ext-HDW**) To install extension, simply set it inside the ad-lib feeder as shown in **Figure #5** and use the 3 screws that are provided with it to fasten the hopper to the plastic housing.

## iFEED ASSEMBLED

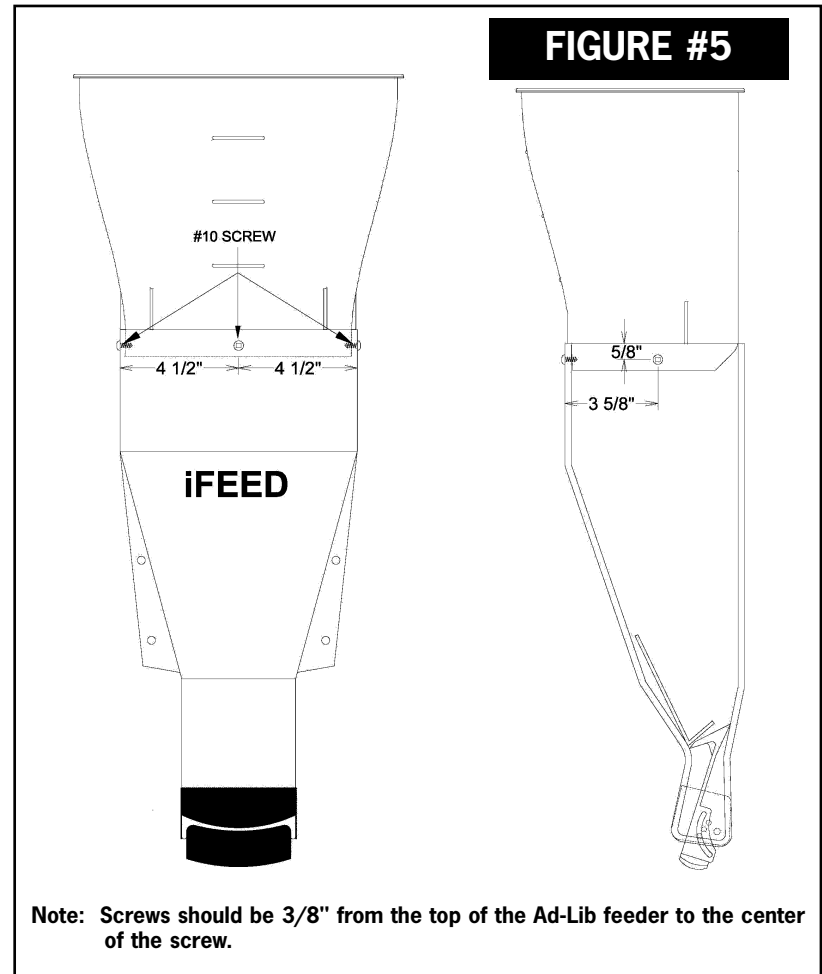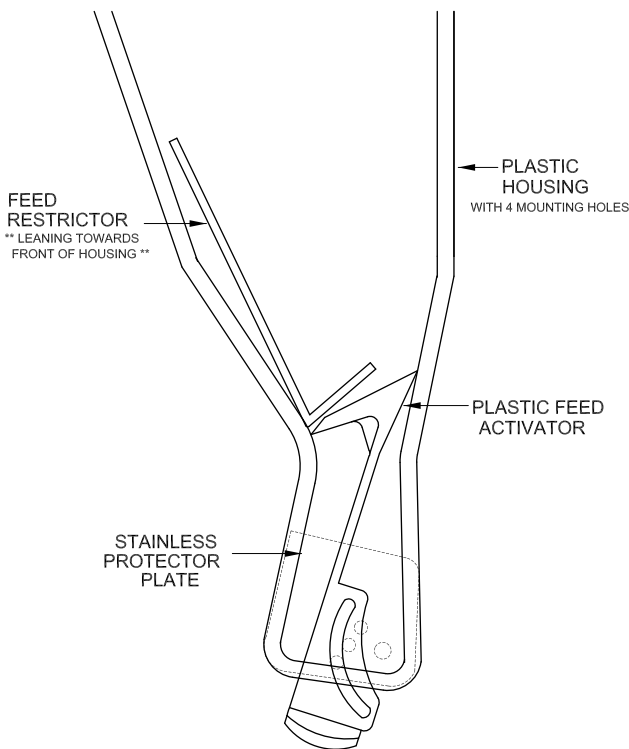

## WARRANTY

CANARM Ltd. warrants every new Ad Lib iFEED feeder to be free of defects in material and workmanship, to the extent that, within a period of one year from the date of purchase CANARM Ltd. shall either repair or replace at CANARM's option, any unit or part thereof, returned freight prepaid, and found to be defective.

This warranty does not include any labour or transportation costs incidental to the removal and reinstallation of the unit at the user's premises. Components repaired or replaced are warranted through the remainder of the original warranty period only.

This warranty applies to the original purchaser-user only; it is null and void in case of alteration, accident, abuse, neglect, and operation not in accordance with instructions.

NOTICE: No warranty claims will be honored by CANARM Ltd. unless prior authorization is obtained.

**CANARM LTD. - Corporate Office**  
2157 Parkedale Ave., PO Box 367 Brockville, ON  
Canada K6V 5V6  
Tel: (613) 342-5424 Fax: 1-800-263-4598  
E-Mail: [agsales@canarm.ca](mailto:agsales@canarm.ca)

[www.canarm.com](http://www.canarm.com)

**Arthur Manufacturing Facility**  
#7686 Concession 16, RR 4 Arthur, ON  
Canada NOG 1A0  
Tel: (519) 848-3910 Fax: (519) 848-3948  
E-Mail: [agsales@canarm.ca](mailto:agsales@canarm.ca)