







## ITG COMPONENTS LIST

ITEM	DESCRIPTION	PART
1	Variable speed control (Kit)	VSCD-3W
2	Control Support	ITG-L37
3	Support	ITG-CU11
4	Electric motor	PS006
5	Gear box	ITG-AR-PS009
6	Plaque pour tendeur	ITG-L13
7	Tensioner adjustable guide	ITG-L12
8	Sprocket	A8000
9	Motor driven sprocket	PS038
10	Chain	ITG-AR-PS033
11	Motor sprocket	PS041
12	Threaded knob 1/4-20	A8022
13	Motor cover	ITG-AS-07
14	Locket S/S $\odot$ 1/2"	A8100
15	3/4" steel collar Z/P	A8231
16	Bolt S/S	IB-AS01
17	Deflector cover	ITG-AS-04
18	V Deflector	ITG-AS-03
19	Pillow block	TG010
20	Lub sticker indicator	A5005
21	Auger	ITG-AS-05
22	Rubber hood catch	P056
23	Auger cover	ITG-L20
24	Equifab sticker 3:1/4" x 19:3/4"	A5003
25	Serial # sticker	A5001
26	Warning sticker E-04	A5004
27	Nut 3/4	A0670
28	Washer	A0674
29	Bracket	ITG-L50-D
30	Bushing	ITG-AR8080
31	Spinner disc	PS012-RB
32	Coupler	TG018
33	Spinner motor	PS053
34	Protective housing	ITG-AS08
35	Wire connector	A3000
36	Motor support	ITG-L43
37	Bolt 3/4-10 X 4:1/2	A0660
38	Bracket	ITG-L50-G
39	Deflector	ITG-AS-06