



INCLUDED IN KIT:

CP1



x2

CP15S



x12

TPU1



x4

NL38




x12

TOOLS REQUIRED:

9/16" SOCKET WITH RATCHET
TO SUIT


OR

9/16" BOX WRENCH


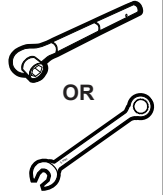


1


Assemble the 4'x4' or 8'x8' CanadaDocks™ using the **"Assembly Instructions for Floating Dock"** included in the box. Be sure that the frame is square before proceeding with the next step.

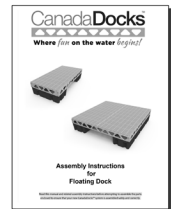

2

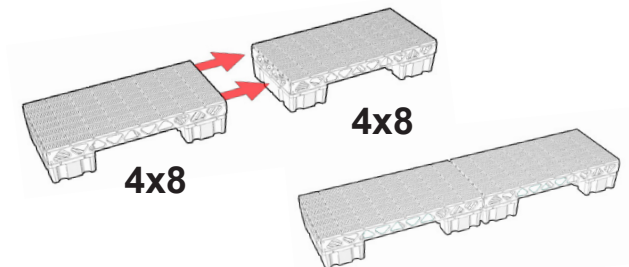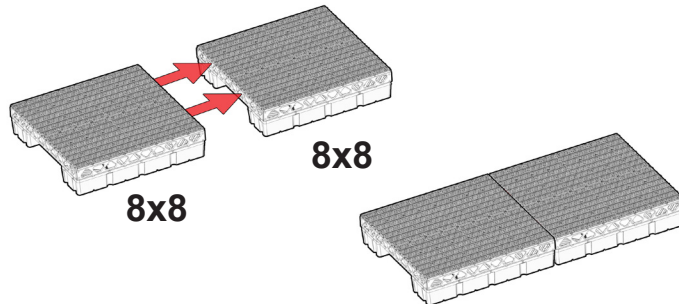

3

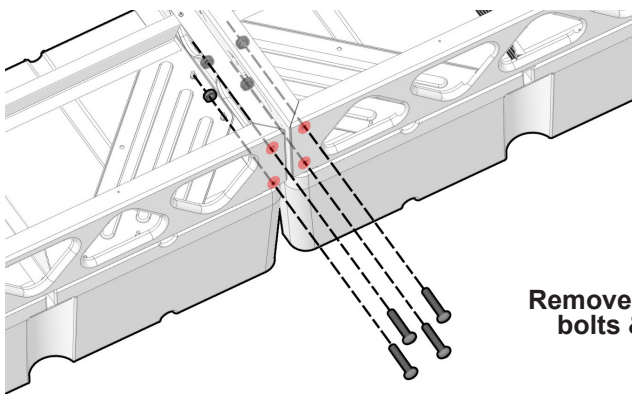


Remove existing
bolts & nuts


PLEASE NOTE: Some details such as decking has been removed to better illustrate assembly.

TIP: Adjust dock height to align holes. Pry bar may help. Mallet or soft faced hammer may be needed to encourage bolts into place.

4

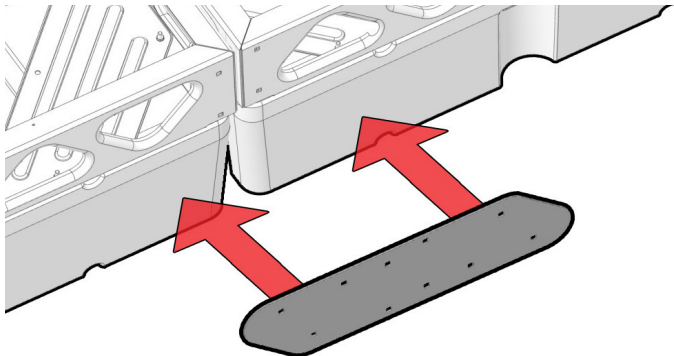


CP1





x1

5

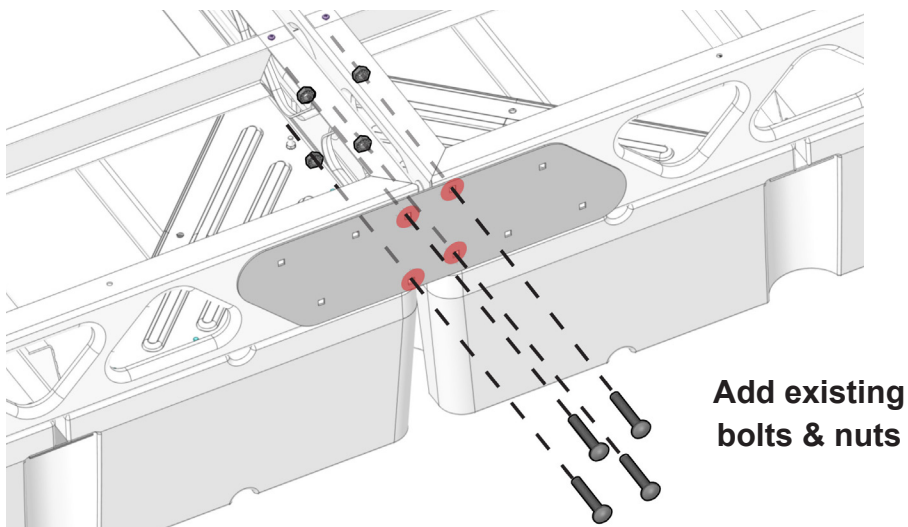

6

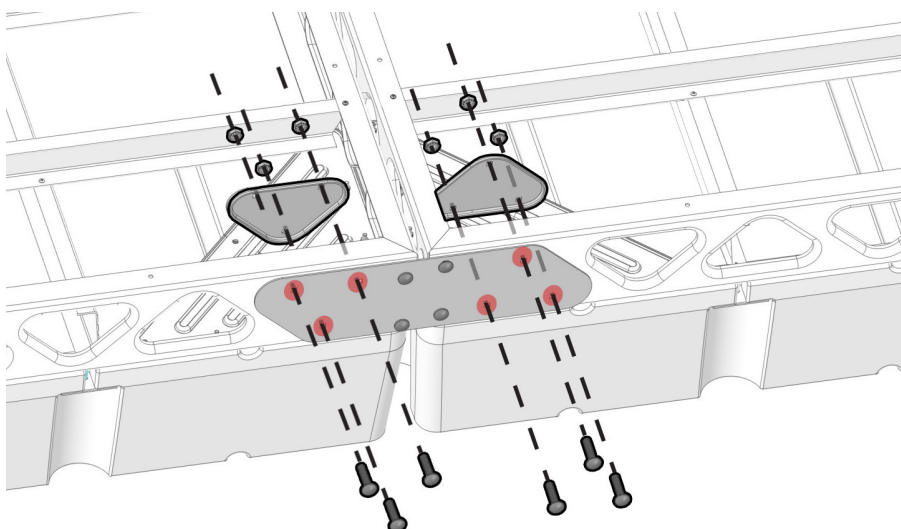

CP15S  x6

TPU1  x2

NL38  x6

Follow **Steps 1-6** for the opposite side of the docks.

7

