

QUICK LINK INSTALLATION

INCLUDED IN KIT:

QLB1



X2

CB15S



X2

WN38



X2

QLB2




X2

NL38




X4

TOOLS REQUIRED:




9/16" socket with ratchet to suit or 9/16" box wrench

1

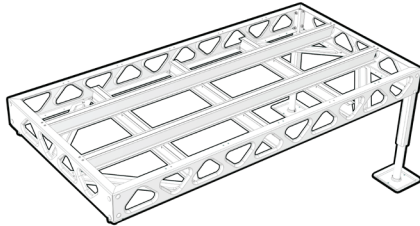

Assemble **CanadaDocks™** frame according to instructions. **Do not install decking at this time.**

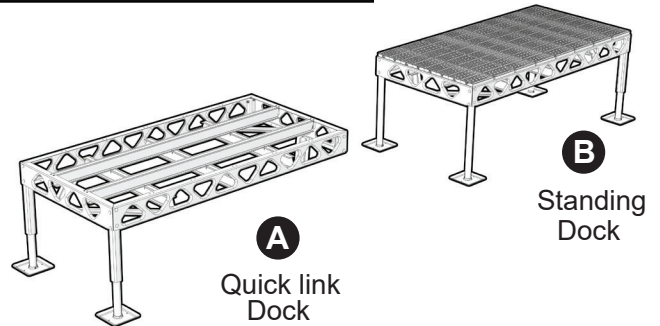

2

QLB1





X2

NL38



X4

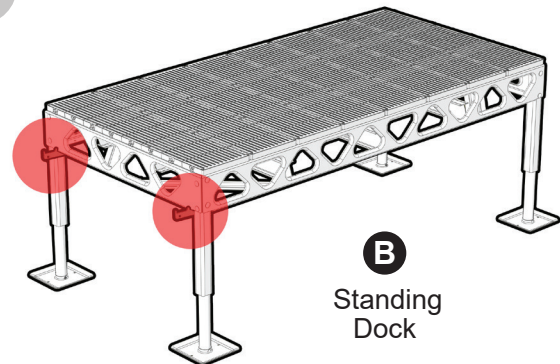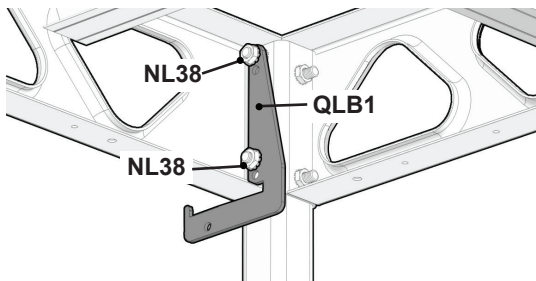



Position the "L" shaped bracket (QLB1) on **top of current locknuts**. Fasten the L-Bracket with locknuts (NL38). Repeat **Step 3** for opposite side of the dock.

3

QLB2





X2

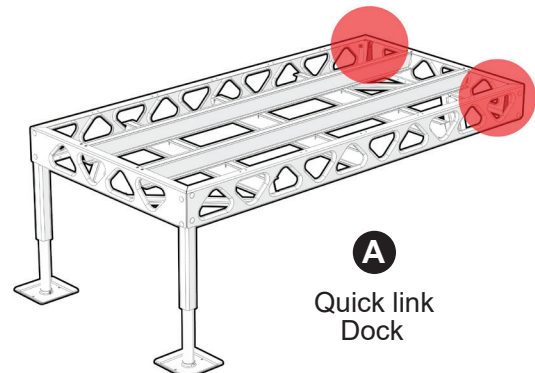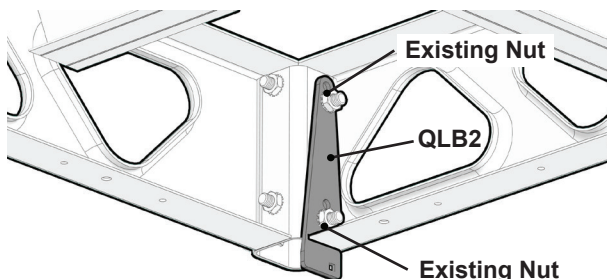


Remove the existing locknuts. Position the joining bracket (QLB2) on the bolts and fasten with existing nuts (See image above). Repeat **Step 2** for the opposite side of the dock.

4

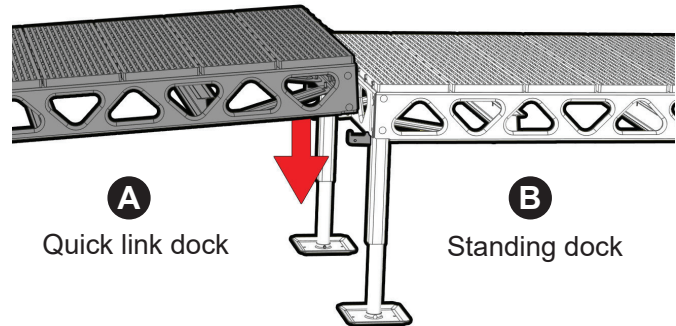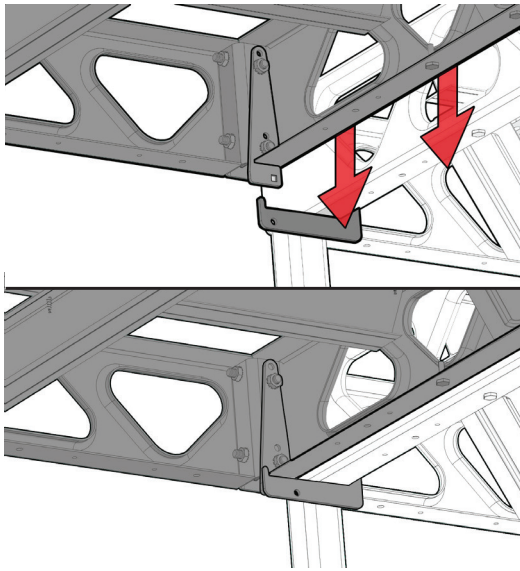

Decking can now be installed on your dock. After decking has been finished you may lower the quick link dock **A** onto the “L” shaped bracket (QLB1) of the existing standing dock. **B**

5

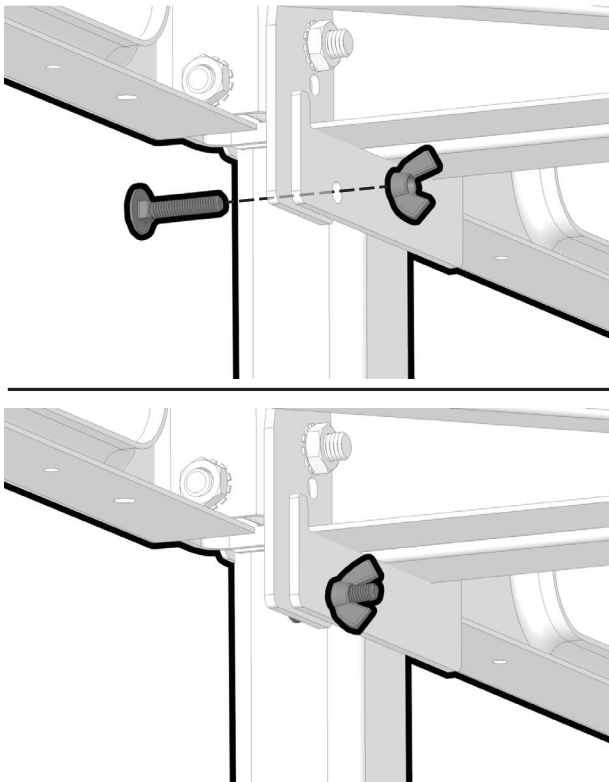

WN38




X2

CB15S



X2

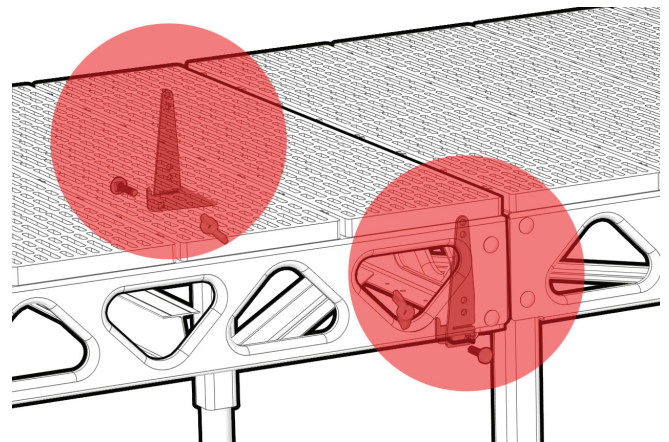

Align holes of both brackets and insert bolt (CB15S). Fasten bolt with wingnut (WN38). Repeat **Step 5** for the opposite side of the dock.