

Operator's Manual 99944200486 Shaft Hedge Trimmer Attachment

FOR MODELS: SRM-2100SB, 2400SB, 210SB, 211SB, 225SB, 260SB, 261SB, PAS-2100, 2400, 2601, 210, 211, 225, 225VP, 225VPB, 230, 231, 260, 261, 265, 266, 280, 2620

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING



Read and understand all provided literature before use. Failure to do so could result in serious injury.

TABLE OF CONTENTS

Table of Contents	. 2
Introduction	
Servicing Information	
Parts/Serial Number	
Service	. 4
ECHO Consumer Product Support	
Product Registration	
Additional or Replacement Manuals	
Safety	
Manual Safety Symbols and Important Information	
International Symbols	
Personal Condition and Safety Equipment	
Equipment	
Description	
Contents	
Assembly	14
Power Head Shaft to Lower Shaft Assembly	14
Support Handle Removal	
Operation	
Hedge Trimming	16
Maintenance	
Skill Levels	17
Maintenance Intervals	17
Lubrication	18
Blades	20
Storage	21
Storage Hook Installation	22
Specifications	22
Product Registration	22

INTRODUCTION

Specifications, descriptions and illustrative material in this literature are as accurate as known at the time of publication, but are subject to change without notice. Illustrations may include optional equipment and accessories, and may not include all standard equipment.



Read and understand all provided literature. Literature contains specifications and information for safety, operation, maintenance, storage and assembly specific to this product. Scan QR codes for more information.



For additional literature, including safety manuals where applicable, or questions regarding terms used in this manual, visit:



https://www.echo-usa.com/manuals

OR




https://www.shindaiwa-usa.com/manuals

SERVICING INFORMATION

Parts/Serial Number

Genuine ECHO Parts and Assemblies for your ECHO products are available only from an Authorized ECHO Dealer. When you do need to buy parts always have the Model Number and Serial Number of the unit with you. For future reference write them in the space provided below.

Model No	 	
Serial No.		

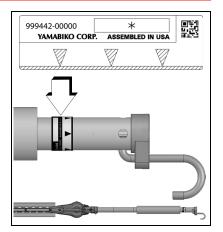

Service

Service of this product during the warranty period must be performed by an Authorized ECHO Service Dealer. For the name and address of the Authorized ECHO Service Dealer nearest you, ask your retailer or call: 1-800-432-ECHO (3246). Dealer information is also available on our Web Site www.echo-usa.com. When presenting your unit for Warranty service/ repairs, proof of purchase is required.

ECHO Consumer Product Support

If you require assistance or have questions concerning the application, operation, or maintenance of this product, call the ECHO Consumer Product Support Department at 1-800-673-1558 from 8:00 am to 5:00 pm (Central Standard Time) Monday through Friday. Before calling, please know the model and serial number of your unit.

Product Registration

Register your ECHO equipment on-line at www.echo-usa.com or by filling out the product registration sheet included in this manual. Registering your product confirms warranty coverage and provides a direct link to ECHO if we find it necessary to contact you.

Additional Literature

In addition to finding information online, information is available from your Authorized ECHO Service Dealer, or by contacting ECHO Inc., 400 Oakwood Road, Lake Zurich, IL 60047 (800-673-1558).

Safety Videos are available from your Authorized ECHO Service Dealer. A \$5.00 shipping charge is required for each video.

SAFETY

Manual Safety Symbols and Important Information

Throughout this manual and on the product itself, you will find safety alerts and helpful, informational messages preceded by symbols or key words. The following is an explanation of those symbols and key words and what they mean to you.

▲ DANGER

The safety alert symbol accompanied by the word "DANGER" calls attention to an act or condition which WILL lead to serious personal injury or death if not avoided.

WARNING

The safety alert symbol accompanied by the word "WARNING" calls attention to an act or condition which CAN lead to serious personal injury or death if not avoided.

A CAUTION

The safety alert symbol accompanied by the word "CAUTION" calls attention to an act or condition which may lead to minor or moderate personal injury if not avoided.

NOTICE

The enclosed message provides information necessary for the protection of the unit.

Note: This enclosed message provides tips for use, care and maintenance of the unit.



CIRCLE AND SLASH SYMBOL

This symbol means the specific action shown is prohibited. Ignoring these prohibitions can result in serious or fatal injury.

International Symbols

Symbol	Description	Symbol	Description
	Warning, See Operator's Manual	\triangle	Safety / Alert
	Wear Eye, Ear and Head Protection		Finger Severing
	Wear Hand and Foot Protection		Rotating Cutting Attachment

Symbol	Description	Symbol	Description
	Wear Face Shield	بلا	Wear Slip Resistant Footwear
	Keep Feet Away From Blade	15 M - 50 FT	Do not operate closer than 15 m (50 ft.) from electrical hazards. Keep bystanders at least 15 m (50 ft.) away
	DO NOT USE BLADES - Line Head Only		Thrown Objects
*	Plan retreat path from falling objects.	SS	Hot Surface
		Keep Bystan	(ICKOUT ders At Least ft.) Away
		Beware Thr Wear Eye	own Objects Protection
S A I I I I I I I I I I I I I I I I I I		Keep Bystande Away 15	ers and Helpers m (50 ft.)

Personal Condition and Safety Equipment

WARNING

Cancer and Reproductive Harm www.P65Warnings.ca.gov

WARNING



The muffler or catalytic muffler and surrounding cover may become extremely hot. Always keep clear of exhaust and muffler area, otherwise serious personal injury may occur.

WARNING

Users of this product risk injury to themselves and others if the unit is used improperly and/or safety precautions are not followed. Proper clothing and safety gear must be worn when operating unit.

Physical Condition

Your judgment and physical dexterity may not be good:

- · If you are tired or sick
- · If you are taking medication
- · If you have taken alcohol or drugs

Operate unit only if you are physically and mentally well.

Eye Protection

WARNING

- ◆ Eye protection that meets ANSI Z87.1 or CE requirements must be worn whenever you operate the unit.
- For additional safety, a full-face shield may be worn over safety glasses or goggles to provide protection from sharp branches or flying debris.

Hand Protection

Wear sturdy, no-slip, rubber work gloves to improve your grip on the handles. Gloves also provide protection against cuts and scratches, cold environments, and reduce the transmission of machine vibration to your hands.

Hearing/Ear Protection

ECHO recommends wearing hearing protection whenever unit is used.



Breathing Protection

Operators who are sensitive to dust or other common airborne allergens may need to wear a dust mask to prevent inhaling these materials while operating unit. Dust masks can provide protection against dust, plant debris, and other plant matter such as pollen. Make sure the mask does not impair your vision, and replace the mask as needed to prevent air restrictions.

Proper Clothing

Wear snug-fitting, durable clothing:

- · Pants should have long legs, shirts should have long sleeves.
- DO NOT WEAR SHORTS.
- DO NOT WEAR TIES, SCARVES, JEWELRY, or clothing with loose or hanging items that could become entangled in moving parts or surrounding growth.
- Keep clothing buttoned or zipped, and keep shirt tails tucked in.

Wear sturdy work shoes with nonskid rubber soles:

- DO NOT WEAR OPEN TOED SHOES.
- DO NOT OPERATE UNIT BAREFOOTED.

Keep long hair away from engine and air intake. Retain hair with cap or net.

Heavy protective clothing can increase operator fatigue, which may lead to heat stroke. Schedule heavy work for early morning or late afternoon hours when temperatures are cooler.

WARNING

The components of this machine generate an electromagnetic field during operation, which may interfere with some pacemakers. To reduce the risk of serious or fatal injury, persons with pacemakers should consult with their physician and the pacemaker manufacturer before operating this machine. In the absence of such information, ECHO does not recommend the use of this machine by anyone who has a pacemaker.



Extended Operation / Extreme Conditions

A CAUTION

Prolonged exposure to cold and/or vibration may result in injury. Read and follow all safety and operation instructions to minimize risk of injury. Failure to follow instructions may result in painful wrist/hand/arm injuries.

It is believed that a condition called Raynaud's Phenomenon, which affects the fingers of certain individuals, may be brought about by exposure to vibration and cold. Exposure to vibration and cold may cause tingling and burning sensations, followed by loss of color and numbness in the fingers. The following precautions are strongly recommended, because the minimum exposure, which might trigger the ailment, is unknown.


- Keep your body warm, especially the head, neck, feet, ankles, hands, and wrists.
- Maintain good blood circulation by performing vigorous arm exercises during frequent work breaks, and also by not smoking.
- Limit the hours of operation. Try to fill each day with jobs where operating the unit or other handheld power equipment is not required.



 If you experience discomfort, redness, and swelling of the fingers followed by whitening and loss of feeling, consult your physician before further exposing yourself to cold and vibration.

Repetitive Stress Injuries (RSI)

It is believed that overusing the muscles and tendons of the fingers, hands, arms, and shoulders may cause soreness, swelling, numbness, weakness, and extreme pain in those areas. Certain repetitive hand activities may put you at a high risk for developing a Repetitive Stress Injury (RSI). An extreme RSI condition is Carpal Tunnel Syndrome (CTS), which could occur when your wrist swells and squeezes a vital nerve that runs through the area. Some believe that prolonged exposure to vibration may contribute to CTS. CTS can cause severe pain for months or even years.

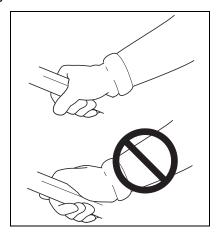

To reduce the risk of RSI/CTS, do the following:

- Avoid using your wrist in a bent, extended, or twisted position. Instead try to maintain a straight wrist position. Also, when grasping, use your whole hand, not just the thumb and index finger.
- Take periodic breaks to minimize repetition and rest your hands.
- Reduce the speed and force with which you do the repetitive movement.
- Do exercises to strengthen the hand and arm muscles.
- Immediately stop using all power equipment and consult a doctor if you feel tingling, numbness, or pain in the fingers, hands, wrists, or arms. The sooner RSI/CTS is diagnosed, the more likely permanent nerve and muscle damage can be prevented.

All over head electrical conductors and communications wires can have electricity flow with high voltages. This unit is not insulated against electrical current. Never touch wires directly or indirectly, otherwise serious injury or death may result.

A DANGER

Do not operate this product indoors or in inadequately ventilated areas. Engine exhaust contains poisonous emissions and can cause serious injury or death.

Read the Manuals

 Provide all users of this equipment with the Operator's Manual and Safety Manual for instructions on Safe Operation.

Clear the Work Area

 Spectators and fellow workers must be warned, and children and animals prevented from coming nearer than 15 m (50 ft.) while the unit is in use.

Keep a Firm Grip

 Hold the front and rear handles with thumbs and fingers encircling the grips.

Keep a Solid Stance

 Maintain footing and balance at all times. Do not stand on slippery, uneven or unstable surfaces. Do not work in odd positions or on ladders. Do not over reach.

Avoid Hot Surfaces

 During operation, the drive shaft housing and attachment bearing housing may become very hot, too hot to touch. Avoid contact during and immediately after operation.





Equipment

WARNING

Use this attachment with ECHO approved models only. Serious injury may result from the use of this attachment combined with a non approved ECHO product.

- Check unit for loose/missing nuts, bolts, and screws.
 Tighten and/or replace as needed.
- Never adjust blades when the engine is operating.



 Check that the blade assembly is firmly attached and in safe operating condition. Dull, loose or damaged blades should not be used.

Note: ECHO, Incorporated will not be responsible for the failure of cutting devicesattachments or accessories which have not been tested and approved by ECHO.

WARNING


Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings.

- ◆ ALWAYS stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.
- ◆ DO NOT start or operate unit unless all guards and protective covers are properly assembled to unit.
- ◆ NEVER reach into any opening while the engine is running. Moving parts may not be visible through openings.



DESCRIPTION

Locate the safety decal(s) on your unit. Make sure the decal(s) is legible and that you understand and follow the instructions on it. If a decal cannot be read, a new one can be ordered from your ECHO dealer.

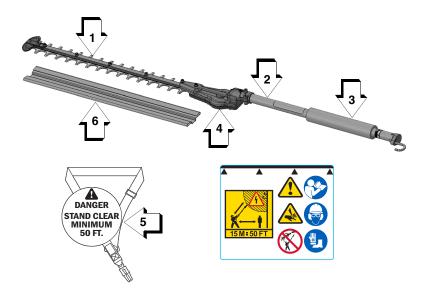

- 1. BLADES
- DRIVE SHAFT ASSEMBLY
- 3. LEFT HAND SHAFT GRIP
- 4. GEAR HOUSING ASSEMBLY
- 5. SHOULDER HARNESS
- BLADE COVER

CONTENTS

The ECHO product you purchased has been factory pre-assembled for your convenience. Due to packaging restrictions, some assembly may be necessary.

After opening the carton, check for damage. Immediately notify your retailer or ECHO Dealer of damaged or missing parts. Use the contents list to check for missing parts.

- HEDGE CLIPPER ATTACHMENT 1
- BLADE COVER 1
- SHOULDER HARNESS 1
- STORAGE HOOK ASSEMBLY
- 1 OPERATOR'S MANUAL

ASSEMBLY

Power Head Shaft to Lower Shaft Assembly

WARNING

Do not perform maintenance or assembly procedures with engine running.

Parts required: PAS or SRM-SB Power Head Shaft and Coupling.

- 1. Set Power Head/Shaft Assembly on a level surface.
- 2. Pull locater pin (A) out, and turn counterclockwise one-quarter turn to lock-out position.
- 3. Remove vinyl cap from attachment drive shaft.
- 4. Remove cardboard spacer, if necessary.

Note: Your coupler may appear different than coupler shown.





 Carefully fit attachment drive shaft assembly into coupler (B) to decal assembly line (C), making sure that the inner lower drive shaft engages the square upper drive shaft socket.

Note: Earlier model power heads may have shorter couplings.

Note: Lower bearing housing and head assembly must be in line with the engine.

- Rotate locater pin (A) onequarter turn clockwise to engage lower shaft hole. Insure locater pin is fully engaged by twisting lower drive shaft. Locater pin should snap flush in coupler. Full engagement will prevent further shaft rotation.
- Secure lower shaft assembly to coupler by tightening clamping knob (D).

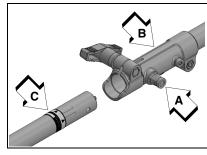


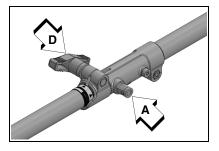

Support Handle Removal

Note: Support handles or support handles with barrier bars are not recommended for use with this attachment.

- Remove support handle assembly, barrier bar (if installed), and mounting hardware from PAS or SRM-SB power head.
- 2. Retain parts for future use.

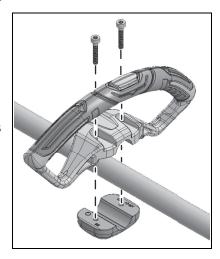

OPERATION

WARNING


Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit.

Note: Refer to your PAS power source Operator's Manuals for correct engine fueling, starting and stopping instructions.

Hedge Trimming

Shoulder Harness (if included)

- Loosen harness clamp screw (A).
- 2. Put harness on and attach it to harness clamp ring (B).
- 3. Adjust harness for comfortable operation.
- Tighten harness clamp screw 4. (A).

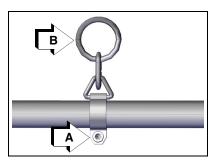

WARNING

Hedge Trimmer blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

WARNING

Never remove hands from unit when blades are moving. The engine continues running even when the blades have stopped due to an obstruction. If this occurs, stop the engine, disconnect ignition cable and remove the obstruction.

- Always grip throttle handle with right hand and support handle with left 1. hand.
- 2. Hold trimmer firmly and squeeze throttle trigger to accelerate engine.



Tilt trimmer so cutting teeth are angled slightly toward the hedge or shrub and proceed to cut.

MAINTENANCE

WARNING

Moving parts can amputate fingers or cause severe injuries. Keep hands, clothing and loose objects away from all openings. Always stop engine, disconnect spark plug, and make sure all moving parts have come to a complete stop before removing obstructions, clearing debris, or servicing unit. Allow unit to cool before performing service. Wear gloves to protect hands from sharp edges and hot surfaces.

WARNING

Operating a poorly maintained unit can result in serious injuries to operator or bystanders. Always follow all maintenance instructions as written, otherwise serious personal injury may result.

Your unit is designed to provide many hours of trouble free service. Regular scheduled maintenance will help your unit achieve that goal. If you are unsure or are not equipped with the necessary tools, we recommend that you take your unit to a Servicing Dealer for maintenance. To help you decide whether you want to DO-IT-YOURSELF or have the Dealer do it, each maintenance task has been graded. If the task is not listed, see your Dealer for repairs.

Skill Levels

Level 1 = Easy to do. Common tools may be required.

Level 2 = Moderate difficulty. Some specialized tools may be required.

Level 3 = See your dealer.

Click HERE or go to http://www.echo-usa.com/products/maintenance-kit or

HERE https://www.shindaiwa-usa.com/you-can.aspx

For information about maintenance kits. Maintenance Intervals

Component	Maintenance Procedure	Skill Level	Interval
Drive Shaft	Apply lithium		Every 25 hours of use.
Gear Housing	based grease.	1	Every 15 - 25 hours of use.
	Lubrication		Livery 13 - 23 flours of use.
Blades	Sharpen	2	As needed.
	Adjust	۷	Every 40 hours of use.
Screws/Nuts/ Bolts	Inspect/Tighten/ Replace	1	Before each use.
IMPODTANT	There is the model of the second		avinarina Astrophica analyzarin

IMPORTANT - Time intervals shown are maximum. Actual use and your experience will determine the frequency of required maintenance.

Lubrication

Blades

Level 1.


Parts Required: 20W Engine Oil (blade lubrication), 50-50 mixture of

kerosene and 20W oil (blade cleaning).

WARNING

Hedge Trimmer blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

- 1. Brush loose debris from blade and coat both sides of blade with the 50-50 cleaning mixture.
- Allow cleaning mixture to soften the remaining gummy residue then wipe it from the blade.
- Apply clean oil to the entire length of the blade. Be certain the blade bolts are lubricated

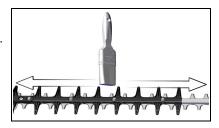


Wipe excess oil from the blade before putting the unit back in service. 4.

Gear Case

Level 1.

Parts Required: A grease gun with lithium based grease.

- 1. Clean dirt from the grease fitting (A).
- Carefully pump grease into fitting (A). DO NOT force grease. Too much pressure will force grease past seals and cause damage. Apply 1 - 2 pumps of grease every 15 - 25 hours of operation.
- 3. Wipe excess grease from around grease fitting.

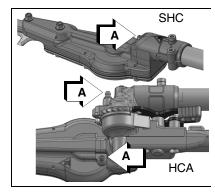

Drive Shaft Assembly


Level 1.

Parts Required: Lithium based grease.

▲ WARNING

Hedge Trimmer blades are very sharp. Touching them may lead to severe personal injury. Avoid touching blades whenever possible, and always wear gloves to protect hands.

 Remove gear housing locating screw (A) and loosen clamping screw (B). Remove the gear housing assembly from the drive shaft housing.

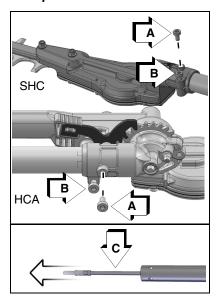

 Pull the drive shaft (C) from the housing, wipe clean, then apply 15 ml (0.5 oz.) of grease.

- 3. Slide the drive shaft back in the drive housing being careful not to get dirt on the flex shaft.
- 4. Install the gear housing assembly.

Blades

WARNING

Hedge trimmer blades are very sharp, touching them may lead to severe personal injury. Use long hex wrenches and sockets with extensions when tightening blade screws and blade lock nuts to keep hands at a safe distance from sharp blades.

Blades should only be removed and reinstalled by an authorized servicing dealer, otherwise premature wear or internal damage may occur.


Sharpening

Level 2.

NOTICE

If a power grinder is used DO NOT allow blade to over heat.

- Move stop switch to STOP position.
- 2. Disconnect spark plug wire.
- 3. Remove blade guard.
- 4. Slide blades to allow file clearance using slots (A) on bottom of blade. Do not pry against cutting edges.
- File each edge carefully. Follow 5. the original shape of the blade.
- 6. Install blade guard.

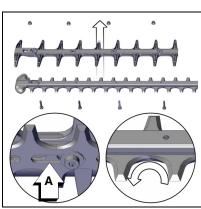

Use new lock nuts each time blade guard is installed. See dealer for correct nuts.

- 7. Lubricate blades (see "Lubrication").
- 8. Connect spark plug wire.


Adjustment

Level 2.

NOTICE

Locking ability of hedge trimmer blade lock nuts will diminish each time they are removed. Replace if turning resistance is not felt when installing lock nuts.

- 1. Tighten blade screws securely.
- Hold blade screws (A) to prevent turning, and tighten lock nuts (B).

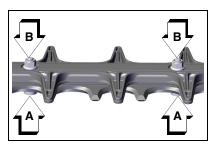

STORAGE


NOTICE

Always install blade cover when transporting or storing unit.

- 1. Clean and lubricate cutting blades and gear case.
- 2. Sharpen cutting blades as required.
- Apply a light coating of clean 20W engine oil along entire length of blades and on blade bolts.
- Install blade cover onto hedge clipper cutting blades.
- 5. Store hedge clipper attachment in a dry, dust free place out of the reach of children, using supplied storage hook.

Storage Hook Installation

- 1. Insert small end of hook into locating hole on attachment shaft.
- 2. Slide plastic cap onto end of attachment shaft.

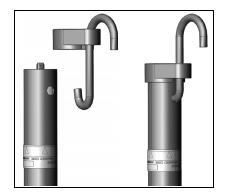

SPECIFICATIONS

MODEL	99944200486
Length	1273 mm (50.1 in.)
Width	80 mm (3.1 in.)
Weight	1.87 kg (4.13 lb.)
Gear Case	4.6:1
Cutter	Double Reciprocating Blade - Double Edge
Effective Length	536 mm (21.1 in.)
Pitch	35 mm (1.4 in.)
Maximum Cut	
Soft Materials	25.4 mm (1 in.) diameter
Woody Materials	13 mm (0.5 in.) diameter

PRODUCT REGISTRATION

Thank you for choosing ECHO Power Equipment

Please go to http://www.echo-usa.com/Warranty/Register-Your-ECHO to register your new product on-line. It's FAST and EASY! NOTE: your information will never be sold or misused by ECHO, Incorporated Registering your purchase enables us to contact you in the unlikely event of a service update or product recall, and verifies your ownership for warranty consideration.

If you do not have access to the Internet, you can complete the form below and mail to:

ECHO Inc., Product Registration, PO Box 1139, Lake Zurich IL 60047.

DU PRODUIT

	JOUCT REGI	(CARTE D'ENREGISTRATION CARD : TARJETA DE REGISTRO : CARTE D'ENREGISTREMENT DU PRODUIT	JE REGISTRO	CARTE D'ENREGISTREN	MENT DU PRODUIT
ONLINE OPTION: Register online and save a stamp! You will be alerted of product updates and/or be sent new ECHO product information and special offers. Simply go to: www.echo-usa.com	save a stamp! You w be sent new ECHO ers. Simply go to:	OPCION POR INTERNET: ¡Registrese en la pagina web y ahorre una estampilla! Le aletrarari sobre actualizaciones del producto ylo se le envira información sobre los nuevos productos ECHO y las ofertas especiales. Simplemente visite:	n la pagina web y actualizaciones del bre los nuevos pro- implemente visite:	OPTION EN LIGNE: Emegister en ligne et épargner un timbre! Vous serez, informé sur les nouveaux produits ECHO et les mises à pour de produit ainsi que les offres spéciéles. Simplement visitez les www.echo-usa.com	ligne et épargner un uveaux produits ECHO une les offres spédiales. echo-usa.com
Please Print : Por Favor Enscriba Con Letra De Molde : En Lettre Carré S.V.P.	etra De Molde : E	n Lettre Carré S.V.P.		Confidential: Information provided will not be shared or sold	ed will not be shared or sold
Purchaser's Name : Nombre del Comprador : Nom de l'acheleur	ador : Nom de l'acl	neteur	Primary use of tool: ☐ Professional Uso primario de la herramienta:☐Pro Usage principal: ☐ Professionnel ☐ Do vou wish to receive periodic FCHC	Primary use of tool: □Professional □ Homeowner □ Rental Equip. Use primario de la herramienta:□Profesional □ Dueño de casa □ Alquiler Usage principal: □ Professionnel □ Residental □ □ Location way wish to receive periodic FCHO product information and special officers	☐ Rental Equip. nno de casa ☐ Alquiler ☐ Location and special offers
Address : Dirección : Adresse			by e-mail? □ Yes □ No ¿Dese-mail? □ Yes □ No ¿Dese-mail? □ Yes □ No tronico sobre el producto ECH Souhaltez-volis recevoir péri	by ye email? Tyes Thousand the production of the	eciales por correo election sur les produits
City : Ciudad : Ville	State : Estado : Province	Zip Code : Código Postal : Code Postal	ECHO et les offres Did you visit the EC	ECHO et les offres spéciales par courrier électronique ? ☐ Oui ☐ Non Did you visit the ECHO website before purchasing your product? ☐ No ☐ No	ur product?
E-Mail Address : Dirección De Correo Electrónico : Courrier Electronique	Electrónico : Coun	ier Electronique	Visito usted la pagi Si No Avez-vous visité le Oui Non	Visito usida la pagina web ECHO antes de comprar su producto? □ Si □ No Avez-vous visité le site d'ECHO avant de procurer votre produit? □ Oui □ Non	u producto? tre produit?
Phone Number: Número De Teléfono: Téléphone		Date of Purchase : Fecha de la Compra : Date de l'achat	What factor(s) most Performance Reliability	What factor(s) most influenced your purchase? Performance	tt.
Where Purchased : Nombre del Almacén donde fue Comprado : Lieu d'achat	n donde fue Compr	rado : Lieu d'achat	¿Qué factor(es) infl ¿Qué factor(es) infl □ Funcionamiento □ Confiabilidad □ Amigo/Familia	s en su comp encia Anterior	dor a
Model Number : Numero del Modelo; No. de modéle Serial Number : Numero de Serie : No.	o. de modéle Serii	al Number : Numero de Serie : No. de série	Quel facteur (facteu Performance Fiabilité	Quef facteur (facteurs) vous a influencé le plus? Performance Prix Marchand Frabilité Expérience Qualité	and
Registering your purchase enables us to contact ownership in the event of loss. ET legistrar su conno el aviso de tiempo de servicio o la revocac L'emegistrement de votre achar nous permettra d'emirettra de entretien ou de rappel du produit et verifier que	you in the unlikely even mpra nos permite estar on del producto y verifi e vous contacter dans vous étes le propriétair	Registering your purchase entables us to contact you in the untilkely event of a service update or product recall and verifies your wownership in the event of loss. It Brighstar as compret nos permitted are notabled to unsted en caso de cultiquier evento come el aviso de fiempo de servicio o la revocación del productor y verificación de propiedad en caso de noto o pédida : Le remengiement de vivite achia hous permittan de vivos contacted entable de modifications des instructions des nistructions den rigidar que capacida controlle en vivie activa controlle et des cas improbable de modifications des instructions derintellen ou de rappel du production y definitien vue vive éte se la production de verifier que vive el vivie en controlle en caso de viol ou de pere.	☐ Ami/Famille ECHO INC., 400 Oakw 1.800.432.ECHO WW	☐ Ami/Famille ☐ Marque ☐ Garant ECHO INC., 400 Oakwood Rd., Lake Zurich, IL 60047 1.800.432.ECHO WWW.ECHO-USA.COM	tie X7572270206 02-2012

T96800001001 - T96800999999



400 Oakwood Road Lake Zurich, IL 60047 www.echo-usa.com